

Warnings:

- Do not operate the appliance unless the accessory is fixed in its place.
- Do not operate it with speeds over 4.
- Do not use the butterfly at the same time as the spatula.
- Do not pour food in while it is operating with this accessory to avoid it from damaging or getting blocked.

Steamer

The steamer includes 3 parts: a small steamer, a big one and the lid.

1. Close the steamer with its lid before using it.
2. Place the steamer on the jar, making sure it fits.

Warnings:

- Do not touch or get close to the steamer to avoid burns.
- Do not cover the steamer's holes with any cloth or object. The steam may come out from the edge or other parts causing risk of burns.


4. BEFORE USE

Note: The product will produce a light smell when it is used for the first time and will disappear after a few minutes. This is due to the manufacturing rests and does not affect to its operating..

3. Take the product out of the box and remove all packaging materials.
4. Make sure the product is in good conditions. If any sign of visible damage is observed, contact immediately with our official Technical Support Service.
5. Place the appliance on a clean, stable and flat surface. Do not place it close to the edge, inside built-in wardrobes or hanging brackets.
6. Clean the appliance before using it for the first time.
7. Connect it to a power supply and press the power switch to turn it on. The machine will beep and the display will turn on.

5. OPERATION**ON/OFF**

- Use this switch to switch the product on and off.

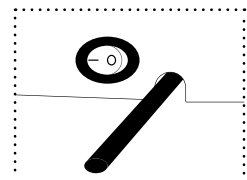**START/PAUSE**

- Press the knob on the product's front part to activate the device and to enter standby mode.
- From the main display, select the desired function.

Застереження:

- Не використовуйте пристрій, якщо аксесуар не закріплений на своєму місці.
- Не використовуйте пристрій на швидкостях, які перевищують 4.
- Не використовуйте вінчик одночасно з лопаткою.
- Не накладайте їжу, коли пристрій працює з аксесуаром, щоб уникнути можливих пошкоджень.

Пароварка

Пароварка складається з 3 частин: мала та велика пароварки, а також кришка.

1. Накривайте пароварку кришкою перед використанням.
2. Помістіть пароварку на чашу та переконайтесь, що вона правильно встановлена.

Застереження:

- Не торкайтесь та не знаходьтесь близько до пароварки, щоб уникнути опіків.
- Не накривайте отвори пароварки тканиною чи іншими предметами. Пара може виходити з країв або інших частин пароварки, що призведе до опіків.


4. ПЕРЕД ПЕРШИМ ВИКОРИСТАННЯМ

Примітка: при першому використанні пристрій видаватиме легкий запах, який зникне через кілька хвилин. Це пов'язано з виробничими залишками та не впливає на роботу пристрою.

3. Витягніть пристрій з коробки та зніміть увесь пакувальний матеріал.
4. Переконайтесь, що пристрій перебуває в хорошому стані. Якщо помітили будь-які пошкодження, то одразу зв'яжіться з нашою офіційною сервісною службою.
5. Розмістіть пристрій на чисту, стійку та рівну поверхню. Не встановлюйте його близько до країв поверхонь, усередині вбудованих шаф або підвісних кронштейнах.
6. Очистіть пристрій перед першим використанням.
7. Під'єднайте пристрій до електромережі та натисніть кнопку живлення, щоб увімкнути його. Пристрій видасть звуковий сигнал та його дисплей увімкнеться.

5. ЕКСПЛУАТАЦІЯ**вкл/викл**

- Використовуйте цей перемикач, щоб увімкнути або вимкнути пристрій.

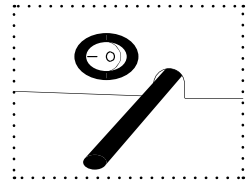

СТАРТ/ПАУЗА

- Натисніть перемикач на передній частині пристрою, щоб активувати пристрій та перейти в режим очікування
- Оберіть необхідну опцію на головному екрані.